


Product-Specific INSTALLATION & TECH SPECS



PROFILE IDENTIFICATION AND DETAILED DRAWING

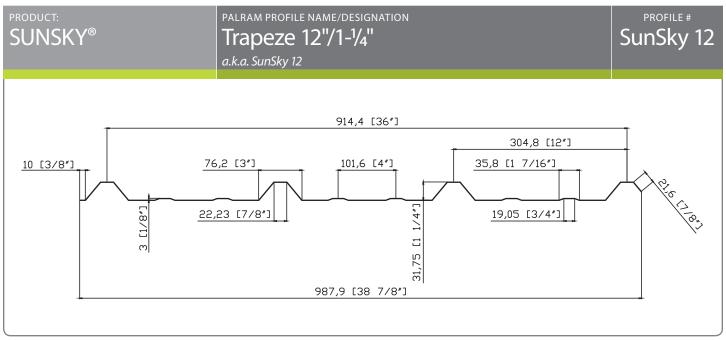

PROFILE DIMENSIONS

PROFILE		THICKNESS		LENGTH †		OVERALL WIDTH		NET COVERAGE AFTER OVERLAP		SIDE LAP
mm	inch	mm	inch	m	feet	mm	inch	mm	inch	%
304.8/31.8	12/1-1/4	.08-1.5	.0306	1.5-11.8	5-39	988	38-7/8	914	36	5.2

† MAXIMUM RECOMMENDED PANEL LENGTH

m	feet
7	24

While it is technically possible to manufacture and ship the maximum length listed, Palram does not recommend exceeding the length shown at left in order to avoid significant issues related to thermal expansion and contraction.

MAXIMUM ROOF SPAN (INCHES)

		•						
Load (lb/ft²)	,	.8mm) iness	.04" (1.0mm) thickness		.05" (1.2mm) thickness		.06" (1.5mm) thickness	
	End Span	Mid Span	End Span	Mid Span	End Span	Mid Span	End Span	Mid Span
10	60	60	60	60	60	60	60	60
20	49	60	52	60	56	60	60	60
30	43	50	45	54	49	57	52	60
40	38	45	42	49	44	52	48	56
50	36	42	38	45	40	48	44	51
60	33	39	36	43	38	45	42	49
70	32	37	34	40	37	43	39	46
80	31	36	33	38	34	42	38	44
90	30	34	31	37	33	39	36	43
100	28	33	30	36	32	38	34	40

NOTES ABOUT MAXIMUM ROOF SPANS

- The specified dimensions do not supersede the requirements of local construction codes.
- The given spans are according to deflections criterion of L/20, and minimum slope of 10%.
- The maximum roof spans are based on calculation model and practical testing.
- The mentioned load refers to wind and snow load only.
- For vertical application spans can be increased by 10%.

Continues on back side

PRODUCT: SUNSKY®

PALRAM PROFILE NAME (a.k.a. Designation)

Trapeze 12"/1-1/4"

PROFILE # SunSky 12

FASTENER AND WASHER SPECIFICATION FOR THIS PROFILE

Valley Fixing Crest Fixing Side Lap Stit

Self-drilling 1/4" (6mm) x 1.5" (38mm) screw with 19 mm diameter- galvanized / aluminum / stainless metal washer attached to EPDM rubber gasket of 55 to 65 shore hardness.

Self-drilling $\frac{1}{4}$ " (6mm) x 2" (51mm) screw with 19 mm diameter- galvanized / aluminum / stainless metal washer attached to EPDM rubber gasket of 55 to 65 shore hardness.

 $\frac{1}{4}$ " (6mm) x 1" (25mm) Grommet Seal or self tapping screw with 19mm aluminum / stainless metal washer attached to EPDM rubber gasket of 55 to 65 shore hardness.

FASTENING

- Apply sealing tape over the SUNSKY panel sidelap corrugation crests, where covered by the next panel.
- Apply sealing tape along the bottom and top end-lap (if there is one), along screw center line or two tapes on both sides of screw center line.
- Pre-drill 3/8" holes where screws are positioned.
- Fasten the screws according to the fastening illustrations below, starting from the first side-lap through, the pre-drilled holes.
- Fasten the Side Lap Stitching Screws or Grommets at every 12-16 inches (Fig. 4).

- Figure 1: End Purlin fastening schedule.
- Figure 2: Intermediate purlin fastening schedule.
- Figure 3: Side Lap Screw through corrugation crown at purlin.
- Figure 4 and 5: Side Lap Stitch Screw or Grommet only, in between purlins so that 12-16 inch spacing can be achieved.






DO NOT OVER-TIGHTEN!


Washers should be perpendicular to purlin, and tightened to the point where they are firmly seated, but not bulging.

FASTENER LOCATIONS FOR THIS PROFILE

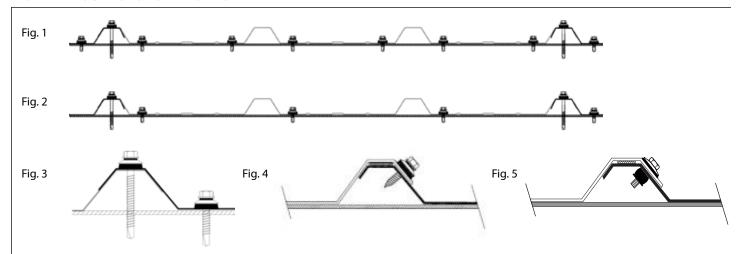

PANEL OVERLAP AND OVERHANG

- Recommended longitude overlap of 8" above purlin.
- Each panel to extend 4" over the fixings line on the purlin.
- Panels should overhang a minimum of 2 inches and maximum 6 inches beyond the row of fasteners.

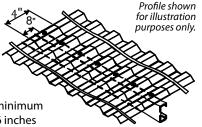

CURVED ROOF APPLICATIONS

Minimum curving radius 43 feet

